



SHIELD LIGHT MANUAL



HAVE A QUESTION?

CONTACT US:

TYR TACTICAL®

9330 N. 91ST AVE

PEORIA, AZ 85345

623-240-1400 PHONE

INFO@TYRTACTICAL.COM EMAIL

FOLLOW US ON SOCIAL MEDIA:



SPECIFICATIONS

The TYR Tactical® Shield Light was designed to fit on our complete line of Shield Systems. The adjustable bracket clamps to the top or side of the shield and can be easily removed when not needed.



Power Pressure Switch

Modes: Full Bright, Half Bright, Strobe & Off


DESIGN FEATURES

- **Lumens:** 800
- **Power Source:** Includes Two 18650-3350 Rechargeable Batteries
- **Battery mAh:** 3350
- **Battery Voltage:** 3.7
- **Battery Charging Voltage:** 4.2
- **Battery Life:** 6+ Hours
- **Wt:** 1.6 lbs.
- **Dim:** 9"W x 4"H
- **Light Source Dim:** 7.5"W x 2"H

Battery Charger Not Included

We recommend purchasing the FARSAIL® Model: SW-1.

COMPONENTS

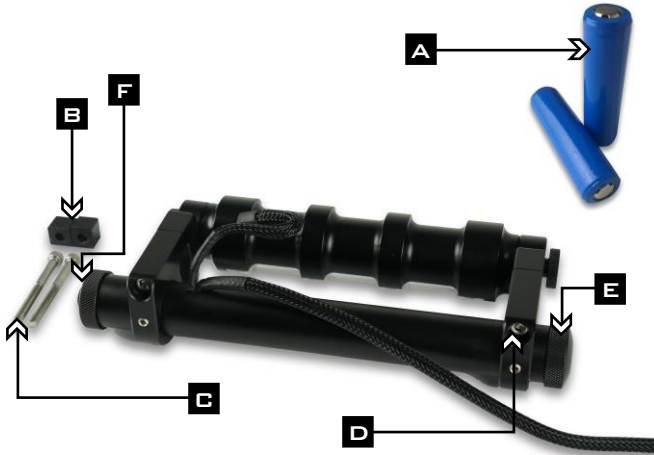

ITEM	FIGURE
TWO 18650 BATTERIES	A
TWO LEVEL III / IV SHIELD SPACERS	B
TWO LEVEL IIIA BOLTS	C
TWO LEVEL III & IV BOLTS	D
BATTERY CAP	E
POWER PRESSURE SWITCH	F

PROPER 18650 BATTERY INSTALL

Unscrew the battery cap (**FIGURE G**). Insert both of the blue 18650-3350 rechargeable batteries, positive end first (**FIGURE H-I**). Screw in battery cap and install is complete (**FIGURE J**).

SHIELD SPACER ADJUSTMENT

The Shield Light comes with the Level III / IV shield spacer installed (**FIGURE K**). The shield spacer will need to be removed if you are running a level IIIA shield. Unscrew both Level III / IV Bolts (**FIGURE L**). Remove both Level III / IV Shield Spacers (**FIGURE M**). Screw in both Level IIIA bolts (**FIGURE N**). Adjustment Complete (**FIGURE O**).



FIGURE G



FIGURE H



FIGURE I



FIGURE J



FIGURE K



FIGURE L



FIGURE M



FIGURE N



FIGURE O



PROPER INSTALL